



INSTALL WATTLE FENCE USING 1 STAKE
PLACED AT EVERY SLAT.(TYP.)

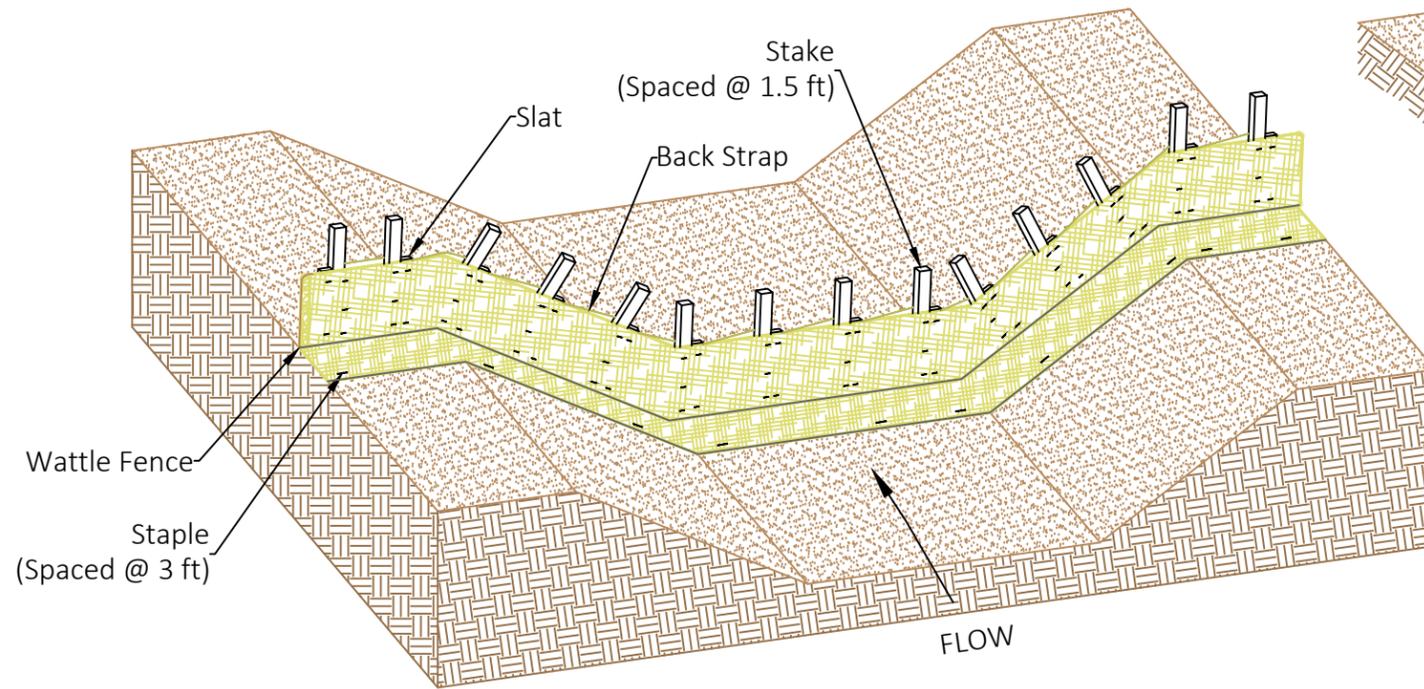

TYPICAL CHANNEL INSTALLATION
N.T.S.

INSTALL WATTLE FENCE USING 1 STAKE
PLACED AT EVERY 3RD SLAT.(TYP.)

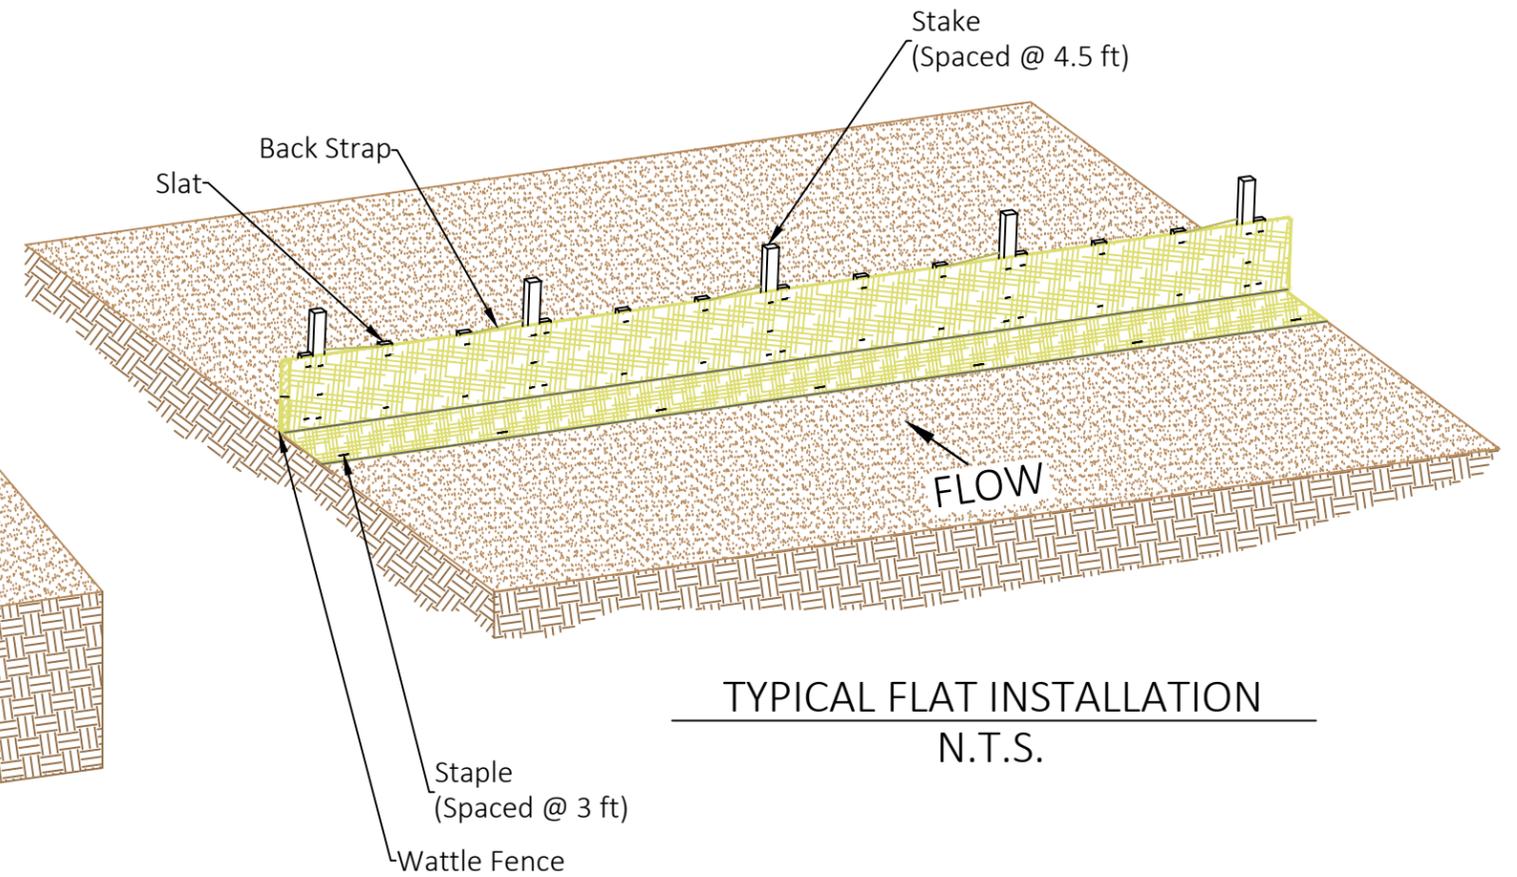


TYPICAL FLAT INSTALLATION
N.T.S.



Project: Standard Slope/Rainfall Layout - RECP







Shown: Isometric View of Slope, Fastener Placement, Some Fasteners and Vegetation Omitted for Clarity, Trenching and Overlap, NTS

Date: 4/4/2023
WG: 886-540-9810
www.westerngreen.com
www.westernexcelsior.com
www.nagreen.com

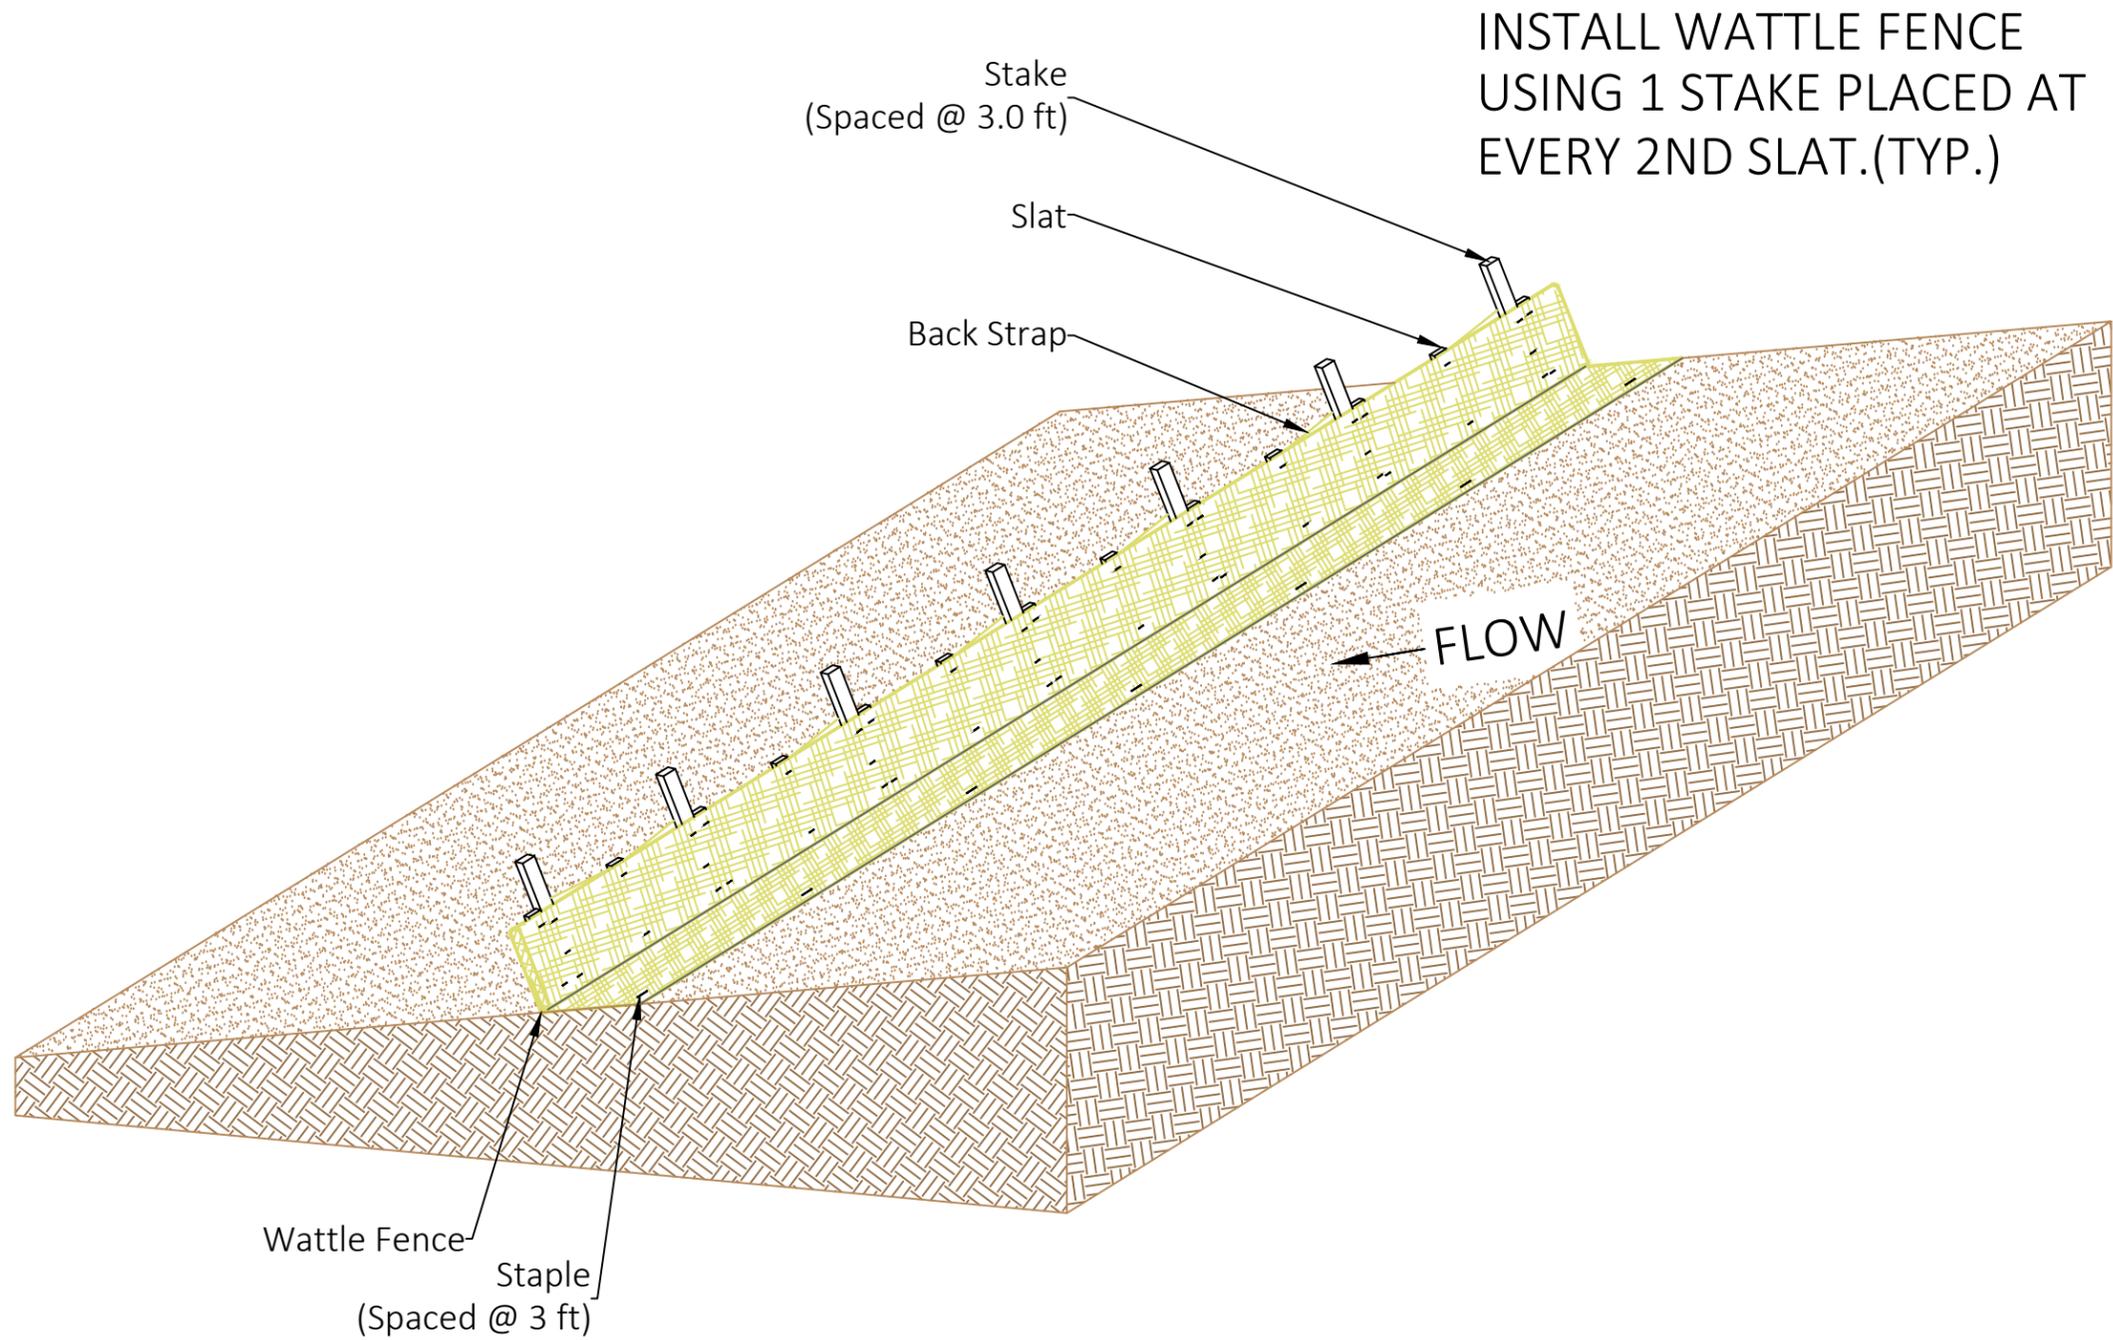

TYPICAL SLOPE INSTALLATION
N.T.S.



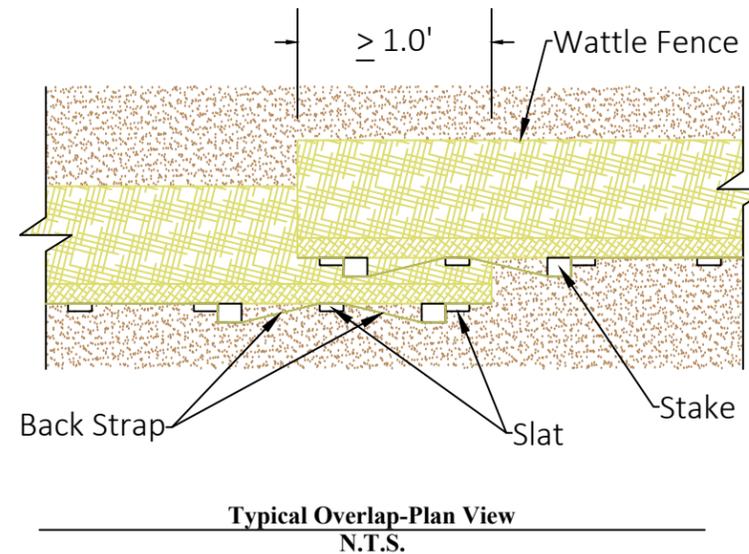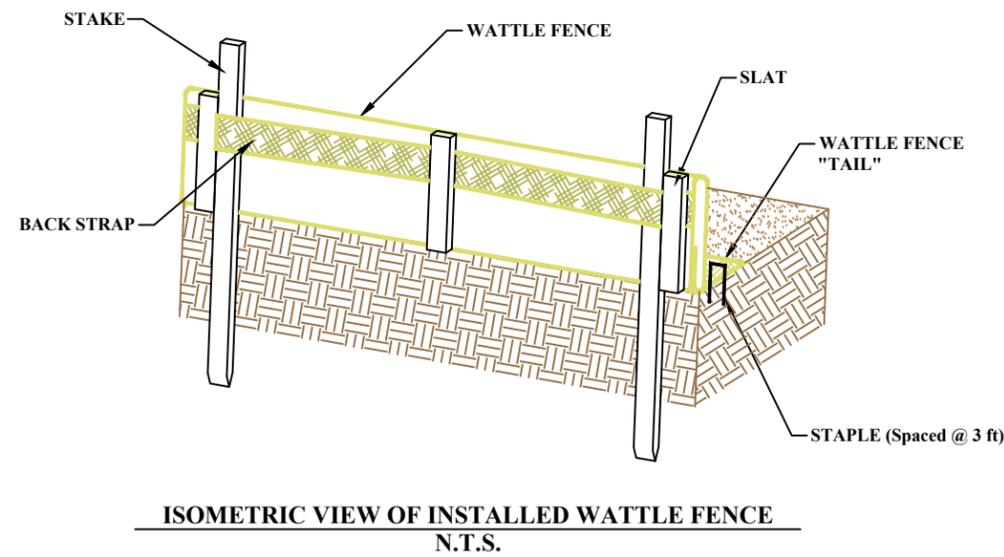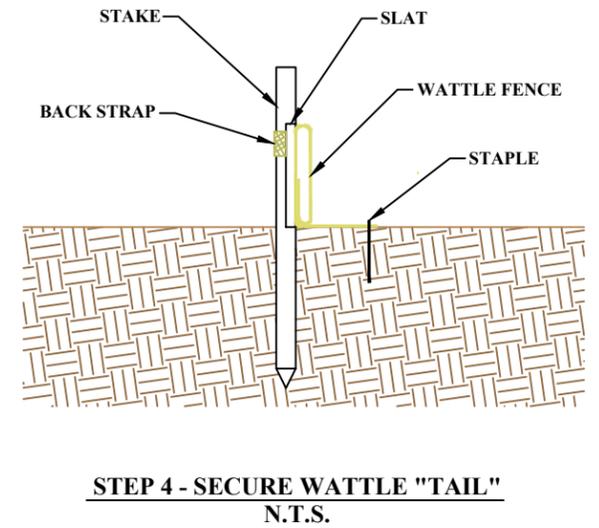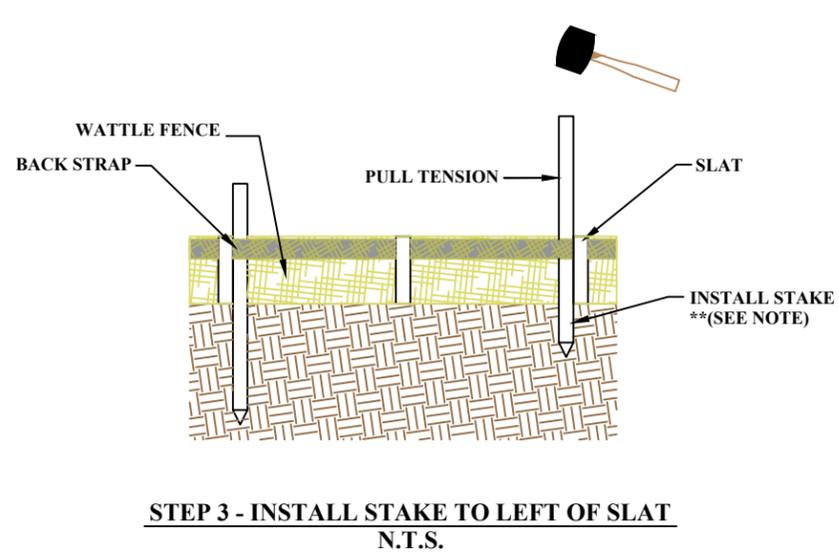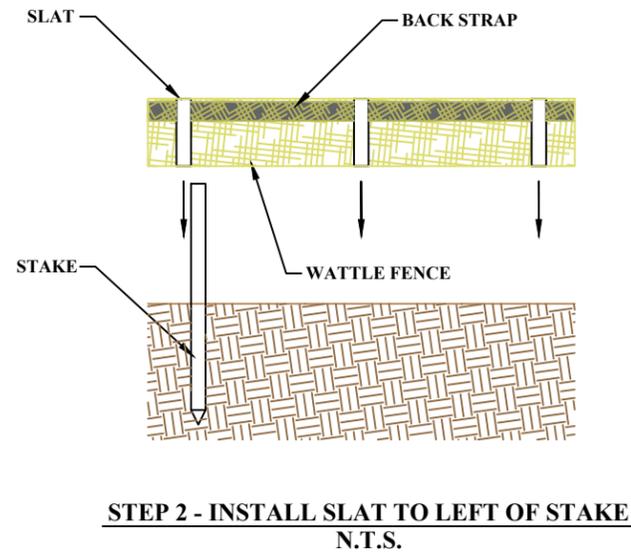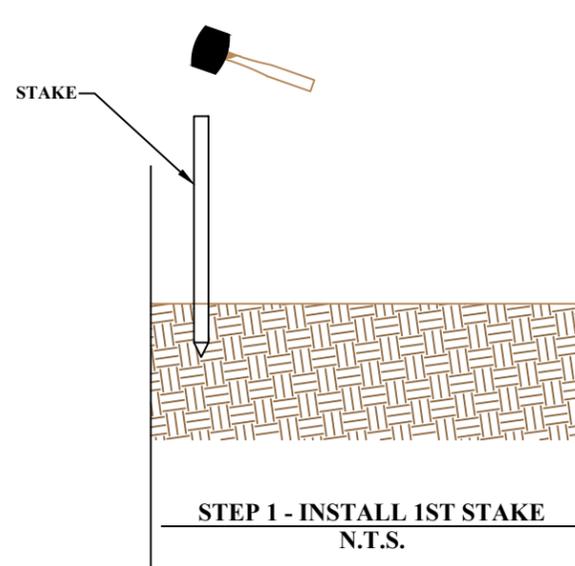

*NOTE:
Install stake between the fence and the back strap (with the slat to the right), creating tension and pulling the fence tight.

For most durable installation, using a hand staple gun, secure fence to stakes with two or more staples.

